



| NO. | ENGLISH | NO. | ENGLISH |
|-----|--------------------------------|-----|-----------------------|
| 1 | Body Rear cover | 40 | Line roller bushing |
| 2 | Body | 41 | Line slider |
| 3 | Oscillation gear bushing | 42 | Bail |
| 4 | Oscillation gear | 43 | Spool Click gear |
| 5 | Oscillation gear screw | 44 | Click gear washer |
| 6 | Oscillation slide | 45 | Spool |
| 7 | Oscillation slide screw | 46 | Lining washer |
| 8 | Body bushing | 47 | Drag washer |
| 9 | Drive gear | 48 | Key washer |
| 10 | Drive gear washer | 49 | Spool Stop ring |
| 11 | Body cover bushing | 50 | Drag knob ass'y |
| 12 | Body cover | 51 | Hander ass'y |
| 13 | Body cover screw | 52 | Body logo plate |
| 14 | Anti reverse lever | 53 | Hander cap washer |
| 15 | Anti reverse lever spring | 54 | Hander cap |
| 16 | Pinion gear | 55 | Body Rear cover screw |
| 17 | Pinion gear ball bearing | 56 | |
| 18 | Pinion gear ball bearing screw | 57 | |
| 19 | Silent ring | 58 | |
| 20 | Silent ring | 59 | |
| 21 | Pinion gear washer | 60 | |
| 22 | Bird slice | 61 | |
| 23 | Bird slice screw | 62 | |
| 24 | Main shaft | 63 | |
| 25 | Rotor | 64 | |
| 26 | Bail holder screw | 65 | |
| 27 | Bail holder | 66 | |
| 28 | Rotor nut screw | 67 | |
| 29 | Rotor nut | 68 | |
| 30 | Bail spring guide | 69 | |
| 31 | Bail spring | 70 | |
| 32 | Bail lever | 71 | |
| 33 | Bail arm cover | 72 | |
| 34 | Bail arm cover screw | 73 | |
| 35 | Bail arm screw | 74 | |
| 36 | Line roller screw | 75 | |
| 37 | Bail arm | 76 | |
| 38 | Line roller washer | 77 | |
| 39 | Line roller | 78 | |